

T70/2



Nr	Article nr	Description
1	IK70PD002	T70/2 transmitter
2	IK70PD017	Hand strap (standard)
3	IK70PD037	B70 Shoulder strap
4	IK70PD010	PS70/2 upper enclosure
5	IK70PD012	PI70/2 lower enclosure
6	IK70PD019	LE72 MCX transmitter logic
7a	IK70PB012	T70 Internal antenna 870 MHz
7b	IK70PD045	T70 Internal antenna 433MHz
8	IK70PB005 IK70PB108	EP70 4k eeprom EP70 16k eeprom
9	IK60PD005	K60 Key switch
10	IK70PD005 IK70PD006	M70 momentary switch 1-0-1 (returns to position 0) S70 switch 1-0-1 (3 fixed positions)
11	IK70PD003	P70 pushbutton
12	IK70PD004	CP70 pushbutton cover
13	IK70PD036	EMS70 emergency stop
14	IK60PD022	Lower shock absorber
15	IK60PD021	Upper shock absorber
16	IK70PD084	INCOSA bumper set
17	IK70PB038	Battery charger CB70
18	IK70PB072	Adaptor for CB70 100-240V
19	IK70PD016	BT06K battery
20	IK70PD066	Set of screws T70/1 – T70/2
21	IK70PD027	Symbols 1/1+2/2 for M70 of S70
22	IK70PD013	Set of symbols - industry
22+23	IK70PD014	Set of symbols - construction