

T IK2

1



2



3










4



5



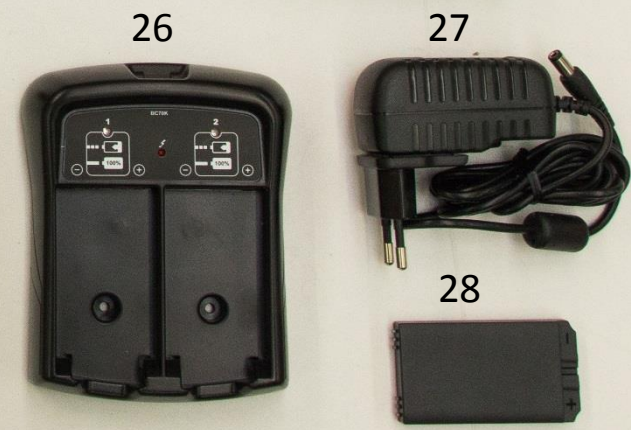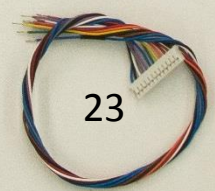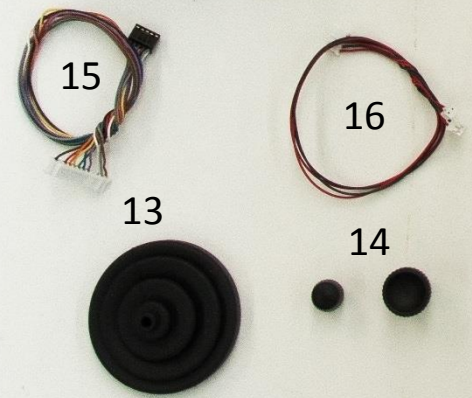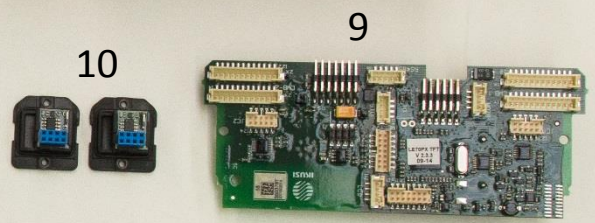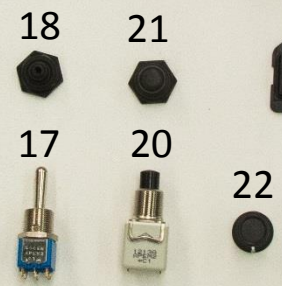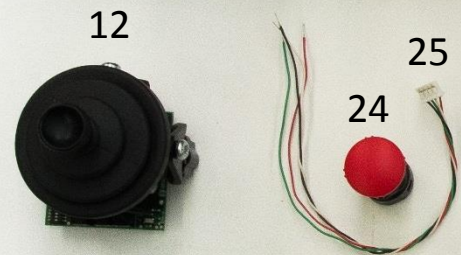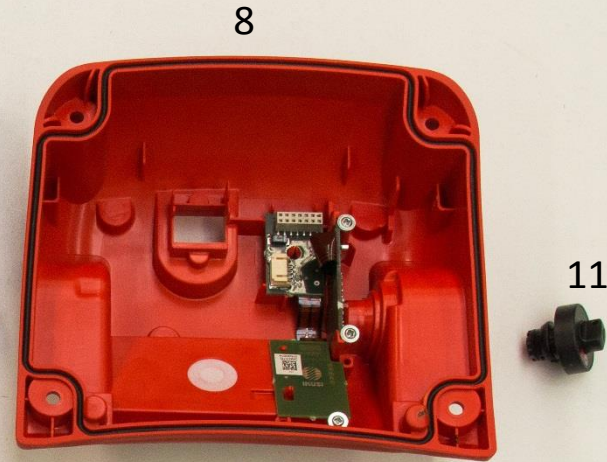

Nr	Article nr	Description
1	IKONPS006	T IK2 Transmitter
2	IK70PD037	B70 shoulder strap (standard)
3	IK60PB005	B70C shoulder strap comfort
4	IKONPS001	Hip belt comfort IK2/IK3/IK4
5	IKONPS015	Mounting kit for hip belt IK2
6	IKONPS019	PS IK2 customized upper enclosure
7	IKONPS031	PS IK2 LED
8	IKONPS018	PI IK2 lower enclosure
9	IKONPS020	LE70IK2 EMB transmitter logic
10	IK70PB005 IK70PB108	EP70 4k eeprom EP70 16k eeprom
11	IKONPS009	Superkey I-kontrol (multikey)
12	IK70PS082 IKONPS040	MO70-2014 (x-y as) HALL joystick (x-y as)
13	IK60PS002	CM070 Joystick cover
14	IK70PS060 IK70PS084	MO70 L (Pomo TM70 large) (standard) MO70 S (Pomo TM70 small)
15	IK70PS083	MO70-2014 function cable
16	IK70PS068	MO70 supply cable for 2 joysticks
17	IK60PS010 IK60PS008	Switch 1-0-1 (3 fixed positions) Momentary switch 1 - 0 - 1 (returns to position 0)
18	IK60PS012	Switch cover
19	IKONPS005	Lateral pushbutton I-Kontrol
20	IK60PS006	Pushbutton auxillary functions 0-1
21	IK60PS007	Pushbutton cover
22	IKONPS026	Rotary switch IK2
23	IK70PS089	Cable auxillary functions IK2
24	IK60PB024	Emergency stop for joysticks
25	IK70PS040	Emergency stop cable for joysticks
26	IKONPS011	Battery charger BC70K for BT11K battery (IK2)
27	IKONPS012	Adaptor 100-240VAC for BC70K charger
28	IKONPS010	BT11K Battery (IK2)