

T IK3

1



2



3









4



5



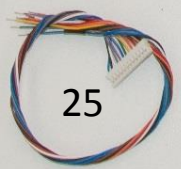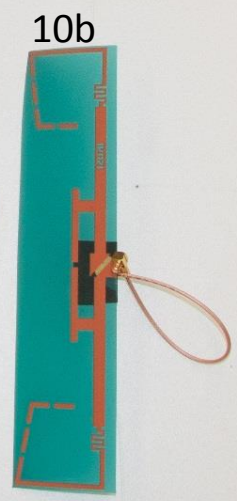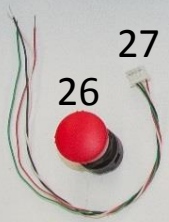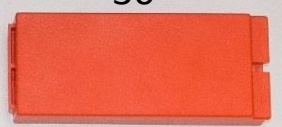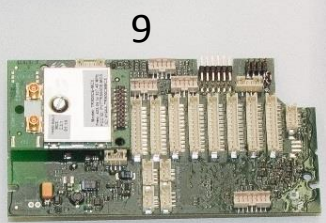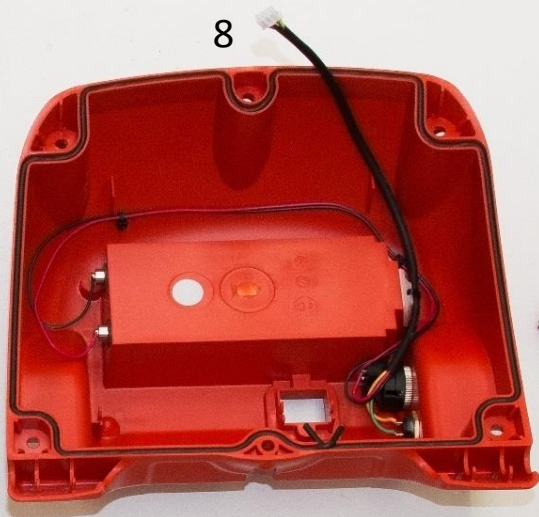

Nr	Article nr	Description
1	IK70PS067	T IK3 Transmitter
2	IKONPS001	Hip belt comfort IK2/IK3/IK4 (standaard)
3	IK70PD037	B70 shoulder strap (standard)
4	IK60PB005	B70C shoulder strap comfort
5	IKONPS003	Mounting kit for shoulder strap IK3
6	IK70PS061	PS IK3 customized upper enclosure
7	IKONPS004	TFT IK3
8	IK70PS063	PI70 IK3 lower enclosure - iKontrol
	IK70PS064	PI70 IK3 cable lower enclosure - iKontrol with cable connector
9	IKONPS007	LE73IK3 TFT MCX transmitter logic
10a	IK70PB055	Antenna T70 joysticks 870-915 MHz
10b	IK70PB109	Antenna T70 joysticks 433 MHz
11	IK70PB005	EP70 4k eeprom
	IK70PB108	EP70 16k eeprom
12	IK60PS047	K60P Key switch sticks
13	IK70PS082	MO70-2014 (x-y as)
	IKONPS040	HALL joystick (x-y as)
14	IK60PS002	CMO70 Joystick cover
15	IK70PS060	MO70 L (Pomo TM70 large) (standard)
	IK70PS084	MO70 S (Pomo TM70 small)
16	IK70PS083	MO70-2014 function cable
17	IK70PS068	MO70 supply cable for 2 joysticks
18	IK70PS059	MO70 supply cable for 3 rd joystick
19	IK60PS010	Switch 1-0-1 (3 fixed positions)
	IK60PS008	Momentary switch 1 - 0 - 1 (returns to position 0)
20	IK60PS012	Switch cover

21	IKONPS005	Lateral pushbutton I-Kontrol
22	IK60PS006	Pushbutton auxillary functions 0-1
23	IK60PS007	Pushbutton cover
24	IKONPS027	Rotary switch IK3
25	IK70PS038	Cable auxillary functions IK3
26	IK60PB024	Emergency stop for joysticks
27	IK70PS040	Emergency stop cable for joysticks
28	IK70PB038	Battery charger CB70 for BT24IK battery (IK3)
29	IK70PB072	Adaptor 100-240VAC for CB70 charger
30	IK70PS065	BT24IK Battery (IK3)