



MOUNTING INSTRUCTIONS

BUMPER SET TM70



1. Unscrew the original upper bumper's screws.



2. While removing the bumper, make sure the 2 nuts don't fall out of the transmitter. Hold the transmitter with the back side facing up.




3. Place the metal bracket in the bumper, making sure the bracket protrudes from the bumper and the holes are aligned.



4. Fix the bumper to the transmitter together with the bracket, using the 2 screws. Verify that the 2 nuts are still in place.



5. Unscrew the original lower bumper's screws.

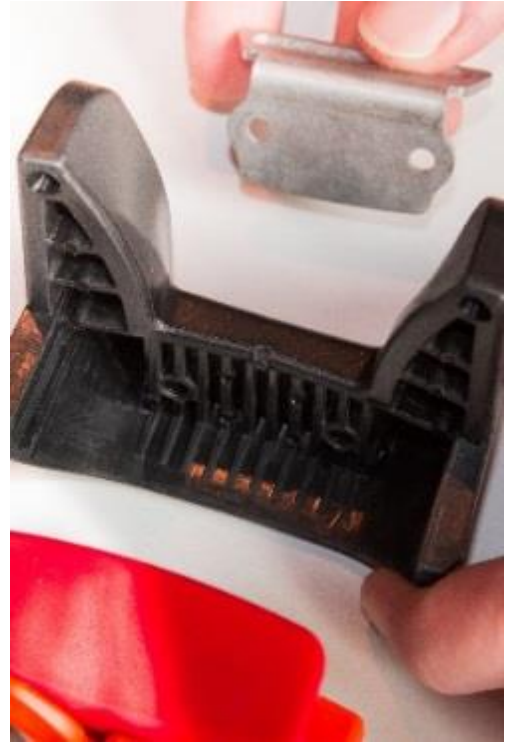

6. Again, make sure the 2 nuts don't fall out of the transmitter. Place the metal bracket at the bottom of the new bumper, so that the holes are aligned.



7. Fix the bumper to the transmitter together with the bracket, using the 2 screws. Verify that the 2 nuts are still in place.



8. Example of a correctly assembled set.

Article reference: IK70PD084

Consisting of: 2 bumpers

2 metal brackets

4 screws